

7" ROUND LED HEADLIGHT KIT

Thank you for choosing Rough Country.

Please read instructions before beginning installation. Check the kit hardware against the parts list. Be sure you have all needed parts and know where they go. Also please review tools needed list and make sure you have needed tools.

If questions exist we will be happy to answer any questions concerning the function and correct use of this product.

Kit Contents:

Qty 2-Rough Country LED 7" round headlights
Qty 2-H13 to H4 Adaptor Plugs (For use with Early JK Models)

Tools Needed: T-15 Torx Head Bit Pry Tool



07-18 JEEP JK

- 1. Remove the 6 plastic push pin retainers using a pry tool. See Photo 1.
- 2. Detach the plastic grill by gently pulling to release the metal clips. **See Photo 2.** Make sure all metal clips are on the plastic grill after removing. If clip is in metal mount. Use needle nose pliers and remove and reinstall on the grill.







- 3. It is not necessary to remove the grill from the vehicle but doing so will allow for additional space to install the headlight. If removing, detach the blinker wire from the grille and set grille aside. **See Photo 3.**
- 4. Using a T-15 torx head bit remove the headlight ring. See Photo 4. Retain the hardware for reuse.





- 5. Unplug the headlight and remove the headlight from the vehicle. See Photo 5.
- 6. If factory plug differs from the LED headlight plug, use the supplied H13 to H4 adaptor. Position the new LED headlight in the headlight bucket paying close attention to the clocking of the headlight. Logo at top and tabs on headlight will position as the factory headlight.
- 7. Re-install the factory trim ring and secure with the factory hardware. Tighten using a T15 torx head bit. See Photo 6.





- 8. Reinstall the blinkers in the grill if removed and reinstall the grill making sure the grill clips engage in the stock locations. **See Photo 7**.
- 9. Reinstall the plastic retainer pins on the top of the grill.





INSTALLATION INSTRUCTIONS

97-06 JEEP TJ / 04-06 JEEP LJ Jeep CJ-7 1976-1986 / Jeep CJ-8 Scrambler 1981-1985

1. Remove the trim ring using a T15 torx head bit. See Photo 1 & 2. Retain hardware and trim ring for reuse.






2. Remove the headlight retaining ring using a T15 torx head bit. Retain the headlight retaining ring and hardware for reuse. **See Photo 3 & 4.**





- 3. Unplug and remove the headlight.
- 4. Plug the LED headlight in the factory plug. See Photo 5.
- 5. Install the LED headlight with the logo at the top and positioned into the factory headlight bucket.
- 6. Re-install the head light retaining ring with the factory hardware. Tighten using a T15 torx head bit. See Photo 6.

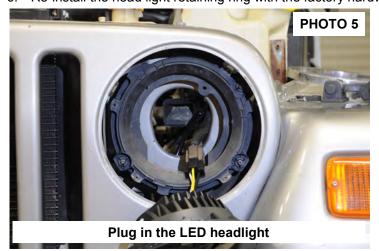





7. Reinstall the head light trim ring and secure with the factory hardware. Tighten using a T15 Torx head bit. See Photo 7.





THANK YOU FOR CHOOSING ROUGH COUNTRY FOR YOUR OFF ROAD NEEDS.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.